



BE PAYMENT READY

USING PAYD PRO[®]



Setting up Your e355 for Android[™]



BE PAYMENT READY

For more information
and assistance:

Web: getpayd.com/paydpro/support

Email: info@getpayd.com

Toll-free: 1-855-423-PAYD (7293)

Record your Moneris® merchant ID here:

Contents

- Introduction 2
- Before you get started 3
- Learning about e355 basics 4
- Pairing a new e355 with your mobile device: Bluetooth 5
- Pairing a new e355 with your mobile device: Wi-Fi 14
- Using the e355: best practices 30
 - Things to do before starting a PAYD Pro transaction 30
 - Staying within communication range 30
 - Communication status indicators 30
 - Powering on the e355 31
 - Conserving e355 battery power 31
 - Maintaining battery charge/powering off the e355 32
 - e355 keyboard: entering numbers, letters, and special characters 33
- Merchant support 34

Introduction

PAYD Pro allows you to accept *Interac*® Debit and credit payments right on your mobile device, just about anywhere your business takes you.

This guide provides instructions on how to pair a Moneris e355 PIN Pad with an Android mobile device (referred to as "mobile device" or "device").

Note: For instructions on how to use PAYD Administration to manage your PAYD Pro store and any other registered account users, refer to the **Using Moneris® PAYD Administration** guide (visit getpayd.com/paydpro/support to download a copy).

Before you get started

1. Ensure that you have the following components:
 - A mobile device that supports Bluetooth® and/or Wi-Fi connectivity.
Note: *If you want to pair the e355 via Wi-Fi, ensure that you have access to a secure (non-public) Wi-Fi network using WPA2 encryption.*
 - e355 and USB charging cable (provided in your welcome kit).
Note: *You will be required to plug this cable into a powered USB port (e.g., on a computer).*
 - The e355's terminal ID (also known as the "PIN Pad ID"), which is an eight-digit alpha-numeric code starting with "E1" (e.g., "E1012345") that is printed on a label affixed to the underside of the e355.
Important! You will be required to refer to this terminal ID during the setup procedures.
2. Ensure that you have your PAYD employee ID (username), store ID, and password.
 - If you do not have the required components and IDs, please contact us: call **1-855-423-PAYD (7293)** or email **info@getpayd.com**.
3. Visit Google Play™, and download/install the latest version of the PAYD App onto your mobile device.
4. Confirm that the PAYD App is closed so that it is not running in the background on your mobile device.
5. Proceed to *Learning about e355 basics* on page 4.

Learning about e355 basics

1. Familiarize yourself with the key elements of the e355:

Label	Description
1	Charge indicator light (right side of the e355)
2	Micro-USB port (right side of the e355) <ul style="list-style-type: none">Plug the USB charging cable here.
3	Cancel key (red)  <ul style="list-style-type: none">Clear a displayed message, or cancel a transaction.Power off the e355 (press and hold down until the e355 beeps and starts to power off).
4	Correct key (yellow)  <ul style="list-style-type: none">Clear data entered on the e355.
5	OK/Enter key (green)  <ul style="list-style-type: none">Submit data or acknowledge a message on the e355.Power on the e355 (press and hold down until the e355 starts to power on).
6	Chip Reader (slot at the bottom of the e355) <ul style="list-style-type: none">Insert debit/credit chip cards into the slot.
7	Display Screen/Contactless Reader <ul style="list-style-type: none">To do contactless transactions, tap/wave debit/credit cards over the screen.
8	Magnetic Stripe Reader (slot along the top of the e355) <ul style="list-style-type: none">Swipe debit/credit cards in the slot.
9	Contactless Reader Indicator (lights up during transactions)



2. Once you have familiarized yourself with the e355, follow the setup procedures for instructions on how to pair the e355 with your mobile device:

- To pair the e355 via Bluetooth, proceed to page 5.
- To pair the e355 via Wi-Fi, proceed to page 14.

Pairing a new e355 with your mobile device: Bluetooth

Follow the steps below to pair and initialize the e355 via Bluetooth.

Important! Before you begin this setup procedure, ensure that the PAYD App is closed so that it is not running in the background on your mobile device.

1 Power on the e355	
a. Plug the small end of the USB charging cable into the micro-USB port on the e355 (see page 4). Important! Use the USB charging cable provided with the e355. Failure to do so may affect the operability of or cause damage to the e355.	
b. Plug the other end of the USB charging cable into a powered USB port (e.g., on a computer). Note: Leave the USB charging cable connected to the e355 for the remainder of the e355 setup procedures.	
c. Wait while the e355 powers on.	
d. When the "LANGUAGE/LANGUE" screen displays, proceed to step 2 (<i>Ready your mobile device for Bluetooth pairing</i>) on page 6.	 <p>The screenshot shows a menu titled "LANGUAGE/LANGUE" with the instruction "SELECT / CHOISIR". Two options are listed: "1 - ENGLISH" and "2 - FRANCAIS". The "1 - ENGLISH" option is highlighted with a green bar, indicating it is the selected choice.</p>

2

Ready your mobile device for Bluetooth pairing

- Power on the mobile device with which you want to pair the e355.
- Ensure that Bluetooth is turned on, the mobile device is discoverable, and its Bluetooth settings screen is displayed.

Note: *If the mobile device has ever been paired with a different e355 or another type of PIN Pad, ensure that the mobile device does not continue to retain the older PIN Pad's terminal ID in its Bluetooth memory (i.e., if necessary, un-pair the older PIN Pad from the mobile device so that it forgets the terminal ID).*
- Place the mobile device beside the e355 with which you want to pair it.
- Proceed to step 3 (*Configure the e355 for Bluetooth communication*) below.

3

Configure the e355 for Bluetooth communication

- On the "LANGUAGE/LANGUE" screen, press the **1** key (**ENGLISH**).

LANGUAGE/LANGUE

SELECT / CHOISIR

1 - ENGLISH

2 - FRANCAIS

- When the "TERMINAL SETUP" screen displays, press the **1** key (**Communication**).

TERMINAL SETUP

1 - Communication

2 - Information

3 - Reboot PED

4 - Factory Defaults

- When the "COMMUNICATION" screen displays, press the **1** key (**PAYD Family**).



COMMUNICATION

SELECT

1-PAYD Family


2-POSPAD

3-Moneris Cloud
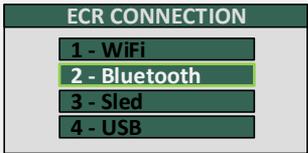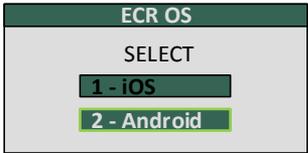
<p>d. When the "ECR CONNECTION" screen displays, press the 2 key (Bluetooth).</p>	
<p>e. When the "ECR OS" screen displays, press the 2 key (Android).</p>	
<p>f. When the "Bluetooth" screen displays, proceed to step 4 (<i>Pair the e355 with your mobile device via Bluetooth</i>) on page 8.</p>	

4

Pair the e355 with your mobile device via Bluetooth
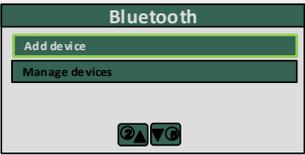
<p>a. On the "Bluetooth" screen, press the green  key (Add device).</p>	
<p>b. Wait while the e355 searches for devices with which to pair.</p>	
<p>c. When the "Add device" screen displays, scroll to your mobile device name, and press the green  key to select it.</p> <p>Note: To scroll up, press the 2 key; to scroll down, press the 5 key. If your mobile device name is not listed, press the yellow  key, and go back to step 4a.</p>	
<p>d. When the "Pair device" screen displays, press the 3 key (Yes).</p>	
<p>e. When the "Pairing" screen displays, wait while the passkey/code is generated.</p>	
<p>f. When the "Please compare" screen displays, note the six-digit passkey/code.</p>	


g.	On the mobile device, wait for the "Bluetooth Pairing Request" popup to display (this popup will also include a six-digit passkey/code).
h.	Compare the passkey/code on the e355 and the passkey/code on the mobile device. If the passkeys/codes are identical, go to the next step.
i.	On the mobile device's "Bluetooth Pairing Request" popup, tap Pair (OK or Connect) .
j.	<div data-bbox="136 542 599 602">On the e355's "Please compare" screen, press the 3 key (Yes).</div> 
k.	<div data-bbox="136 724 614 784">When the "Paired" screen displays, press the green  key (OK).</div> 
l.	<div data-bbox="136 902 583 963">When the "REBOOT TERMINAL" screen displays, wait while the e355 reboots.</div> 
m.	Proceed to step 5 (<i>Confirm that your mobile device is successfully paired with the e355</i>) on page 10.

5

Confirm that your mobile device is successfully paired with the e355

- a. When the "WELCOME/BONJOUR" screen displays, go to the next step.

Note: The clock time ("hh:mm AM/PM") at the top of the e355 screen will be synchronized to the correct time when you initialize the e355. To conserve power, the e355's screen may dim, and/or display "Moneris BE PAYMENT READY", or turn off completely. If this happens, simply continue the setup steps as instructed.

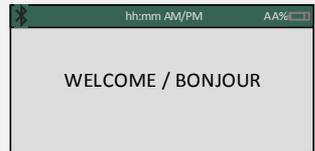

- b. On your mobile device's Bluetooth settings screen, locate the e355's eight-digit terminal ID, which displays with the prefix "e355-" as in "e355-E1012345".

Note: The e355's terminal ID (e.g., "E1012345") is also printed on a label affixed to the underside of the e355.

- c. On your mobile device's Bluetooth settings screen, confirm that the terminal ID is shown as a "Connected" or "Paired" device.

- d. Proceed to step 6 (*Initialize the e355 via Bluetooth*) on page 11.

6

Initialize the e355 via Bluetooth


- a. From your mobile device's home screen, tap the **PAYD** icon () to launch the PAYD App.
 - If the "Terms of Use" screen displays, read the terms, and tap the **I Agree** button.
 - If at any time the PAYD App requests permission to access data from your mobile device (e.g., location, microphone, or contacts data), allow the PAYD App to access the data.
- b. When the PAYD sign-in screen displays, sign into the PAYD App.
 - If at any time the "Pinpad has been successfully connected" popup displays, tap the **OK** button to continue.
- c. In the PAYD App, start on the "Settings" screen.

Note: If another screen is displayed, tap , and then tap **Settings**.

- d. Tap **Pinpad**.
- e. Tap the **Bluetooth** button if it is not already selected.
- f. When the "Terminal ID:" line item displays the e355's terminal ID (e.g., "E102345"), go to the next step.

Note: The terminal ID starts with the prefix "E1" and is also printed on a label affixed to the underside of the e355.

- g. Tap the **Initialize Pinpad** button.

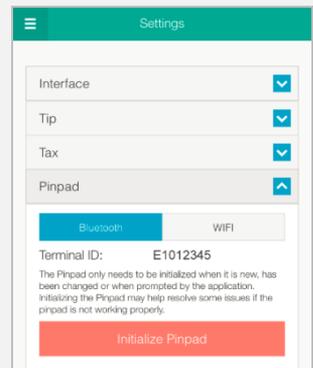

- h. Wait while the PAYD App attempts to communicate with the e355 (for a very brief period, the e355 displays the "CONNECTED TO BT <Your mobile device name >" screen).



<p>i. When the e355 displays the "PLEASE WAIT" screen, wait while the e355 initializes.</p> <p>Note: During this period, the PAYD App displays the "Initializing Pinpad. This may take a few minutes" screen.</p>	 <p>A rectangular box with a light gray background and a thin black border. The text "PLEASE WAIT" is centered in a dark gray, sans-serif font.</p>
<p>j. When the PAYD App displays the "Initialization was successful. Pinpad is ready to use" popup, tap the OK button to continue.</p>	
<p>k. When the e355 displays the "WELCOME/BONJOUR" screen, go to the next step.</p> <p>Note: To conserve power, the e355's screen may dim, and/or display "Moneris BE PAYMENT READY", or turn off completely. If this happens, simply continue the setup steps as instructed.</p>	 <p>A screenshot of a mobile device screen. At the top, there is a status bar with a red signal strength indicator, the time "hh:mm AM/PM", and a battery icon labeled "AA%". Below the status bar, the text "WELCOME / BONJOUR" is centered in a dark gray, sans-serif font. The background is light gray.</p>
<p>l. In the PAYD App, tap  to return to the main menu, and then tap Sign Out.</p>	
<p>m. Proceed to step 7 (<i>Charge the e355's battery to full capacity</i>) on page 13.</p>	

7

Charge the e355's battery to full capacity

- a. Leave the USB charging cable plugged into the e355 and the external power source until the e355's battery has reached optimum charge: at least 90%. (If the USB charging cable is not connected to the e355, connect it now.)

Note: It may take up to 3 hours to reach optimum charge depending on the battery's current charge status. The orange light above the micro-USB port will blink continuously while the battery is charging.

Note: The battery charge indicator displays on the e355's "WELCOME/BONJOUR" screen. If the e355 screen backlight is dim, and/or "Moneris BE PAYMENT READY" displays, or the backlight turns off completely during charging, simply press the green  key to return to the "WELCOME/BONJOUR" screen.

Important! Use the USB charging cable provided to work with the e355. Failure to do so may affect the operability of or cause damage to the e355.

- b. Once the battery has reached optimum charge (at least 90%), you may disconnect the USB charging cable.



- c. The e355 is now ready to process PAYD Pro transactions.

For useful tips and recommendations on how to maintain your e355, proceed to *Using the e355: best practices* on pages 30 to 32.

Pairing a new e355 with your mobile device: Wi-Fi

Follow the steps below to pair and initialize the e355 via Wi-Fi.

Important! Before you begin this setup procedure, ensure that the PAYD App is closed so that it is not running in the background on your mobile device.

1 Power on the new e355	
a. Plug the small end of the USB charging cable into the micro-USB port on the new e355 (see page 4). Important! Use the USB charging cable provided with the e355. Failure to do so may affect the operability of or cause damage to the e355.	
b. Plug the other end of the USB charging cable into a powered USB port (e.g., on a computer). Note: Leave the USB charging cable connected to the e355 for the remainder of the e355 setup procedures.	
c. Wait while the e355 powers on.	
d. When the "LANGUAGE/LANGUE" screen displays, proceed to step 2 (<i>Ready your mobile device for Wi-Fi pairing</i>) on page 15.	 <p>The screenshot shows a screen titled "LANGUAGE/LANGUE" with the instruction "SELECT / CHOISIR". Two options are listed: "1 - ENGLISH" and "2 - FRANCAIS". The "1 - ENGLISH" option is highlighted with a green bar, indicating it is the selected choice.</p>

2 Ready your mobile device for Wi-Fi pairing

- a. Power on the mobile device with which you want to pair the e355.
- b. Determine which is the network that you want to use to pair the e355 with the mobile device:
 - If you want the mobile device to connect an external Wi-Fi network, configure the mobile device to connect to the network.

Note: *In the upcoming steps, you will be instructed to configure the e355 to connect to the same Wi-Fi network as the mobile device.*


Important! Do not attempt to configure the e355 to connect to a public Wi-Fi network.
 - If you want the e355 to connect to the mobile device's personal Wi-Fi hotspot, generate the hotspot from the mobile device now.
- c. Place the mobile device beside the e355 with which you want to pair it.
- d. Proceed to step 3 (*Configure the e355 for Wi-Fi communication*) below.



3 Configure the e355 for Wi-Fi communication

- a. On the "LANGUAGE/LANGUE" screen, press the **1** key (**ENGLISH**).



- b. When the "TERMINAL SETUP" screen displays, press the **1** key (**Communication**).

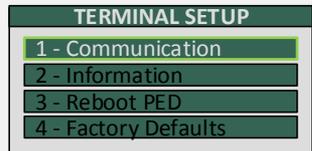
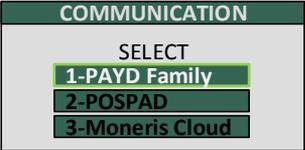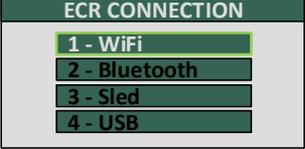
<p>c. When the "COMMUNICATION" screen displays, press the 1 key (PAYD Family).</p>	
<p>d. When the "ECR CONNECTION" screen displays, press the 1 key (WiFi).</p>	
<p>e. When the "WiFi" screen displays, create a profile for the Wi-Fi network to which you want the e355 to connect:</p> <ul style="list-style-type: none"> ▪ To manually enter the Wi-Fi network name (SSID), proceed to step 4 (<i>Create a Wi-Fi network profile on the e355: manually entering the SSID</i>) on page 17. ▪ To scan for the Wi-Fi network name (SSID), proceed to step 5 (<i>Create a Wi-Fi network profile on the e355: scanning for the SSID</i>) on page 19. <p>Note: Use the scan option only if you are certain that the desired Wi-Fi network is broadcasting its SSID.</p>	

4

Create a Wi-Fi network profile on the e355: manually entering the SSID

- a. On the "WiFi" screen, press the **1** key (New).

Note: If you have already configured a Wi-Fi network profile, it will be listed on this screen.



- b. When the "View/Edit" screen displays, press the green **OK** key (SSID).



- c. When the "SSID" screen displays, enter the name/SSID of the Wi-Fi network to which you want the e355 to connect, and press the green **OK** key (OK).

Note: This parameter is case sensitive. To enter small/capital letters and special symbols, see page 33.





- d. When the "View/Edit" screen displays, press the **5** key to scroll to **Wi-Fi Password**, and then press the green **OK** key.



- e. When the "Wi-Fi Password" screen displays, enter the password of the Wi-Fi network to which you want the e355 to connect, and press the green **OK** key (OK).

Note: This parameter is case sensitive. To enter small/capital letters and special symbols, see page 33.

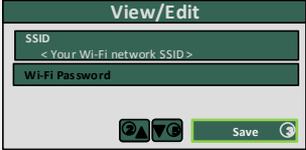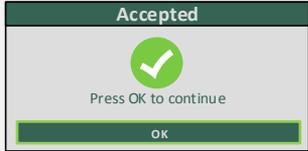

<p>f. When the "View/Edit" screen displays, press the 3 key (Save).</p>	
<p>g. When the "Configure Interface" screen displays, wait while the e355 applies the network settings.</p>	
<p>h. When the "Accepted" screen displays, press the green  key (OK).</p>	
<p>i. Wait while the e355 establishes its connection to the Wi-Fi network (during this period, the "WELCOME/BONJOUR NOT CONNECTED" screen displays).</p>	
<p>j. When the "CONNECTED TO Wi-Fi < Your Wi-Fi network SSID >" screen displays, go to the next step. Note: <i>Your Wi-Fi network SSID and the e355's IP address (e.g., "987.654.3.21") display on the screen.</i></p>	
<p>k. When the "WELCOME/BONJOUR" screen displays, proceed to step 6 (<i>Confirm that the e355 is connected to the Wi-Fi network</i>) on page 21.</p>	

5

Create a Wi-Fi network profile on the e355: scanning for the SSID

- a. On the "WiFi" screen, press the **3** key (**WiFi Scan**).



- b. When the "WiFi Scan" screen displays, wait while the e355 scans for available Wi-Fi networks.



- c. When the list of available Wi-Fi networks displays, scroll to the Wi-Fi network to which you want the e355 to connect, and press the green **OK** key to select it.

Note: To scroll down, press the **5** key; to scroll up, press the **2** key. If your Wi-Fi network is not listed, press the yellow **<** key, and go back to step 5a of this procedure.




- d. When the next screen displays your Wi-Fi network profile settings, press the **3** key (**Add**).



- e. When the "Wi-Fi Password" screen displays, enter the password for your Wi-Fi network, and press the green **OK** key.

Note: This parameter is case sensitive. To enter small/capital letters and special symbols, see page 33.

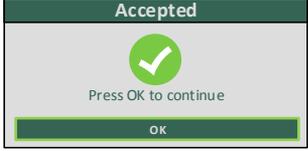

<p>f. When the "Configure Interface" screen displays, wait while the e355 applies the network settings.</p> <p>Note: <i>This process may take up to two minutes.</i></p>	
<p>g. When the "Accepted" screen displays, press the green  key (OK).</p> <ul style="list-style-type: none"> ▪ If the "Internal error" screen displays, press the green  key (OK), and go back to step 5a of this procedure. ▪ If the "Failed: Wifi already present" screen displays, press the green  key (OK) to clear the error screen, and then press the red key  twice. 	
<p>h. Wait while the e355 establishes its connection to the Wi-Fi network (during this period, the "WELCOME/BONJOUR NOT CONNECTED" screen displays).</p>	
<p>i. When the "CONNECTED TO Wi-Fi < Your Wi-Fi network SSID >" screen displays, go to the next step.</p> <p>Note: <i>Your Wi-Fi network SSID and the e355's IP address (e.g., "987.654.3.21") display on the screen.</i></p>	
<p>j. When the "WELCOME/BONJOUR" screen displays, proceed to step 6 (<i>Confirm that the e355 is connected to the Wi-Fi network</i>) on page 21.</p>	

6

Confirm that the e355 is connected to the Wi-Fi network

- a. On the "WELCOME/BONJOUR" screen, confirm that the Wi-Fi icon () is displayed in the upper left corner on the screen and your Wi-Fi network SSID is displayed at the top centre on the screen.

The network icon () may display periodically beside the Wi-Fi icon.

Note: *As long as the e355 can connect to the Wi-Fi network, the network SSID will display at five-second intervals at the top centre of the e355 screen (otherwise, the e355's internal clock time "hh:mm AM/PM" will display). The clock time will be synchronized to the correct time when you initialize the e355.*



- b. Proceed to step 7 (*Pair the e355 with your mobile device via Wi-Fi*) on page 22.

7

Pair the e355 with your mobile device via Wi-Fi


- a. From your mobile device's home screen, tap the **PAYD** icon () to launch the PAYD App.
 - If the "Terms of Use" screen displays, read the terms, and tap the **I Agree** button.
 - If at any time the PAYD App requests permission to access data from your mobile device (e.g., location, microphone, or contacts data), allow the PAYD App to access the data.

- b. When the PAYD sign-in screen displays, sign into the PAYD App.
 - If at any time the "Pinpad has been successfully connected" popup displays, tap the **OK** button to continue.

- c. In the PAYD App, start on the "Settings" screen.


Note: *If another screen is displayed, tap , and then tap **Settings**.*


- d. Tap **Pinpad**.
- e. Tap the **WIFI** button.
- f. Register the e355's IP address in the PAYD App:
 - To manually enter the e355's IP address, proceed to step 8 (*Manually enter the e355's IP Address*) on page 23.
 - To make the PAYD App scan for the e355's IP address, proceed to step 9 (*Scan for the e355's IP Address*) on page 26.

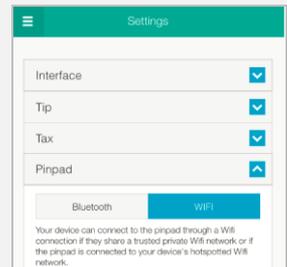

8

Manually enter the e355's IP Address
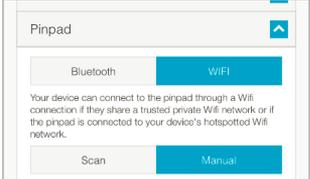
<p>a. In the PAYD App, tap the Manual button.</p>	 <p>The screenshot shows the 'Pinpad' app interface. At the top, there are two buttons: 'Bluetooth' and 'WIFI'. Below these, there is a text block: 'Your device can connect to the pinpad through a WiFi connection if they share a trusted private WiFi network or if the pinpad is connected to your device's hotspotted WiFi network.' At the bottom, there are two buttons: 'Scan' and 'Manual', with 'Manual' highlighted in blue.</p>
<p>b. On the e355's "WELCOME/BONJOUR" screen, simultaneously press both the 4 key and the yellow  key.</p>	 <p>The screenshot shows the e355 device screen with the text 'WELCOME / BONJOUR' centered on a grey background. The status bar at the top shows signal strength, '< Your Wi-Fi network SSID >', and battery level 'AA%'.</p>
<p>c. When the e355 displays the "WiFi" screen, locate the "IP Address" value.</p>	 <p>The screenshot shows the 'WiFi' configuration screen on the e355. It lists fields for Status, SSID, IP Address, and Network. The IP Address field is highlighted with a green border. At the bottom, there are three icons (a triangle, a square, and a circle) and an 'OK' button.</p>
<p>d. In the PAYD App's Pinpad IP field, enter the e355's IP address.</p>	 <p>The screenshot shows the 'Pinpad IP' field in the PAYD app. The field is empty. Below it is a red button labeled 'Save and Connect'.</p>
<p>e. On the e355's "WiFi" screen, press the 3 key (OK).</p>	 <p>This screenshot is identical to the one in row c, showing the 'WiFi' configuration screen with the IP Address field highlighted and the 'OK' button at the bottom.</p>
<p>f. When the e355 displays the "WELCOME/BONJOUR" screen, go to the next step.</p>	 <p>This screenshot is identical to the one in row b, showing the e355 device screen with the text 'WELCOME / BONJOUR' centered on a grey background.</p>
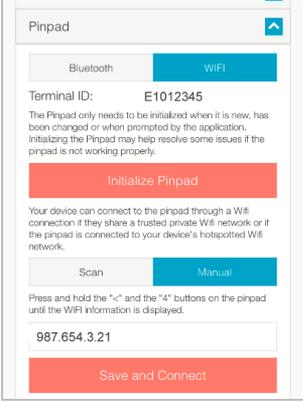
<p>g. In the PAYD App, tap the Save and Connect button.</p>	
<p>h. When the "Configuring pinpad" screen displays, wait up to 60 seconds for the next screen to display, and then go to step 8i.</p> <ul style="list-style-type: none"> If the "Configuring pinpad" screen continues to display for more than 60 seconds, go to step 8k. 	
<p>i. In the PAYD App, wait for a response:</p> <ul style="list-style-type: none"> If the "Terminal ID:" line item displays the e355's terminal ID, (e.g., "E1012345"), proceed to step 10 (<i>Initialize the e355 via Wi-Fi</i>) on page 28. <p>Note: <i>If the "Pinpad has been successfully connected" popup displays, tap the OK button to continue.</i></p> <ul style="list-style-type: none"> If the "Terminal ID:" line item does not display, go to step 8j. 	
<p>j. Tap  to return to the main menu, and then tap Sign Out.</p>	
<p>k. Close the PAYD App so that it is not running in the background on the mobile device.</p>	
<p>l. From the mobile device's home screen, tap the PAYD icon () to launch the PAYD App.</p>	
<p>m. When the PAYD sign-in screen displays, sign into the PAYD App.</p> <ul style="list-style-type: none"> If at any time the "Pinpad has been successfully connected" popup displays, tap the OK button to continue. 	

n. In the PAYD App, start on the "Settings" screen.


Note: *If another screen is displayed, tap , and then tap **Settings**.*

o. Tap **Pinpad**.

p. Go back to step 8i of this procedure.

9 Scan for the e355's IP Address

a. In the PAYD App, tap the **Scan** button.

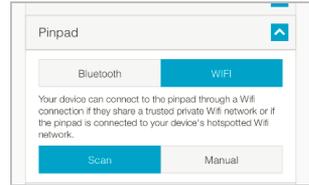

b. When the PAYD App displays the "Scanning. Please wait" screen, wait while the PAYD App attempts to detect the e355's IP address on the Wi-Fi network (this process may take up to a minute).




c. In the PAYD App, wait for a response:

- If the "Terminal ID:" line item displays the e355's terminal ID (e.g., "E1012345"), proceed to step 10 (*Initialize the e355 via Wi-Fi*) on page 28.

Note: *If the "Pinpad has been successfully connected" popup displays, tap the OK button to continue.*

- If the "Terminal ID" line item does not display, go to step 9d.

Note: *If the "No pinpads were found..." popup displays, tap the OK button to continue.*

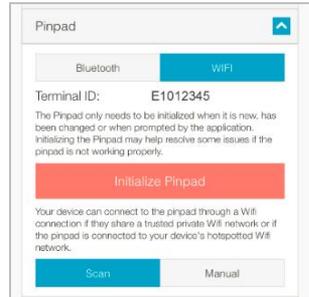

d. Tap  to return to the main menu, and then tap **Sign Out**.

e. Close the PAYD App so that it is not running in the background on the mobile device.



- f. From the mobile device's home screen, tap the **PAYD** icon () to launch the PAYD App.
- If at any time the "Pinpad has been successfully connected" popup displays, tap the **OK** button to continue.

g. When the PAYD sign-in screen displays, sign into the PAYD App.

h. In the PAYD App, start on the "Settings" screen.

Note: *If another screen is displayed, tap , and then tap **Settings**.*

i. Tap **Pinpad**.

j. Go back to step 9c of this procedure.

10 Initialize the e355 via Wi-Fi

<p>a. In the PAYD App, tap the Initialize Pinpad button.</p>	
<p>b. When the e355 displays the "PLEASE WAIT" screen, wait while the e355 initializes.</p> <p>Note: <i>During this process, the PAYD App displays the "Initializing Pinpad. This may take a few minutes" screen.</i></p>	
<p>c. When the PAYD App displays the "Initialization was successful. Pinpad is ready to use" popup, tap the OK button to continue.</p>	
<p>d. When the e355 displays the "WELCOME/BONJOUR" screen, go to the next step.</p>	
<p>e. In the PAYD App, tap  to return to the main menu, and then tap Sign Out.</p>	
<p>f. Proceed to step 11 (<i>Charge the e355's battery to full capacity</i>) on page 29.</p>	

11 Charge the e355's battery to full capacity

- a. Leave the USB charging cable plugged into the e355 and the external power source until the e355's battery has reached optimum charge: at least 90%. (If the USB charging cable is not connected to the e355, connect it now.)

Note: It may take up to 3 hours to reach optimum charge depending on the battery's current charge status. The orange light above the micro-USB port will blink continuously while the battery is charging.

Note: The battery charge indicator displays on the e355's "WELCOME/BONJOUR" screen. If the e355 screen backlight is dim and/or "Moneris BE PAYMENT READY" displays during charging, simply press the green  key to return to the "WELCOME/BONJOUR" screen.

Important! Use the USB charging cable provided to work with the e355. Failure to do so may affect the operability of or cause damage to the e355.

- b. Once the battery has reached optimum charge (at least 90%), you may disconnect the USB charging cable.



- c. The e355 is now ready to process PAYD Pro transactions.

For useful tips and recommendations on how to maintain your e355, proceed to *Using the e355: best practices* on pages 30 to 32.

Using the e355: best practices

Moneris recommends that you follow these general guidelines to use and maintain your e355.

Things to do before starting a PAYD Pro transaction

1. Ensure that your mobile device is powered on and the PAYD App is closed (i.e., not running in the background on your mobile device).
2. Press the green  key to ensure that the e355 is powered on and ready (see page 31).
3. Launch the PAYD App on your mobile device, and sign into the PAYD App.
4. Check the e355 communication status indicators to ensure that the e355 is connected to your mobile device and/or the Wi-Fi network (see *Staying within communication range* below).
5. Initiate your transaction.

Staying within communication range

- Keep the e355 and your mobile device in close proximity to each other.
- Do not attempt to perform PAYD Pro transactions near strong sources of electromagnetic interference.

Communication status indicators

The indicators shown below should display on your e355's "WELCOME/ BONJOUR" screen when you are ready to perform transactions.

Communication type	e355 screen status indicators
Bluetooth	 hh:mm AM/PM AA% 
Wi-Fi	 < Your Wi-Fi network SSID > AA% 

Powering on the e355

Before you perform a PAYD Pro transaction, confirm that the e355 is powered on by pressing the green  key and waiting for a response:

e355 response	e355 status
Beeps and displays the "WELCOME/BONJOUR" screen.	The e355 is powered on and ready to do transactions. Note: After several minutes of inactivity, the e355 will attempt to conserve its power (see Conserving e355 battery power below).
Screen remains dark (the backlight is turned off completely).	The e355 is powered off. Press and hold down the green  key until the e355 starts to power on.

Conserving e355 battery power

If the e355 is powered on but not being used to perform transactions, it will go into an idle state to conserve power (the e355 screen backlight dims and/or "Moneris BE PAYMENT READY" displays).

If you do not initiate a transaction from the PAYD App or press the green  key /the red  key on the e355 keypad, and:

Bluetooth is enabled:

- The e355 will go into a sleep/stand-by state (the screen backlight will turn off completely) for up to several hours¹, and then the e355 will shutdown/power off completely.

Wi-Fi is enabled:

- The e355 will remain in its idle state for as long as the battery is sufficiently charged.¹

¹ If the e355 loses its connection with the mobile device for up to 15 minutes (e.g., the e355 is outside its Bluetooth communication range/cannot connect to the Wi-Fi network), the e355 will shut down/power off completely.

Maintaining battery charge/powering off the e355

- When you are not using the e355 (e.g., at night), connect it to a power source via the USB charging cable, and leave the e355 to recharge to full capacity. OR
- Power off the e355 by pressing and holding down the red  key until the e355 beeps and starts to shutdown/power off (ensure that the USB charging cable is not connected to a power source).

Charge indicator light

The charge indicator light is located on right side of e355 (see page 4). If the e355 is powered off or it is powered on but goes into a sleep/stand-by state to conserve power (see page 31), the charge indicator light will turn off.

light Colour		Description
Orange		Battery is charging (blinking light).
Green		Battery charge is moderate to high.
Yellow		Battery charge is moderate to low.
Red		Battery charge is critically low. Connect e355 to power source.

e355 keyboard: entering numbers, letters, and special characters

Press the e355 keys to enter numbers, letters, and special symbols.

1. To enter the desired value in a data field, press the key that corresponds to the value that you want to enter (press the key repeatedly as necessary until the desired value is displayed in the field. Refer to the table below for the full list of corresponding values.)
2. Once a value is successfully entered, proceed to enter the next value.

Note: *The SSID (network name) and password parameters are case sensitive (i.e., if your network SSID and password contain capital and small letters, you must enter capital and small letters in the data fields).*

- To delete/correct the last entered value, press the yellow  key.

Key	Enters this value
1	1, Q, Z, <period>, q, z
2	2, A, B, C, a, b, c
3	3, D, E, F, d, e, f
4	4, G, H, I, g, h, i
5	5, J, K, L, j, k, l
6	6, M, N, O, m, n, o
7	7, P, R, S, p, r, s
8	8, T, U, V, t, u, v
9	9, W, X, Y
0	0, *, #, <period>, -, <space>, +, <comma>, ', ", !, :, ;, @, =, &, /, \, %, \$, (,), ^, _

Merchant support

If you need assistance with your payment processing solution, we're here to help, 24/7.

We're only one click away.

- Visit getpayd.com/paydpro/support to:
 - Consult the FAQs on how to set up and use PAYD Pro.
 - Download PAYD Pro guides to assist with getting started, configuration, and usage instructions.
- Visit shop.moneris.com to purchase point-of-sale supplies and accessories.
- Visit moneris.com/insights for business and payment news & trends, customer success stories, and quarterly reports & insights.

Can't find what you are looking for?

- Email info@getpayd.com or call Moneris Customer Care toll-free (available 24/7) at **1-855-423-PAYD (7293)**. We'll be happy to help.
- You can also send us a secure message 24/7 by logging in to Merchant Direct® at moneris.com/mymerchantdirect.



BE PAYMENT READY

Important! You must use the USB charging cable provided with the e355. Failure to do so may affect the operability of or cause damage to the e355.

®MONERIS, PAYD, PAYD PRO, MERCHANT DIRECT, MONERIS PAYD and MONERIS BE PAYMENT READY & Design are registered trade-marks of Moneris Solutions Corporation. INTERAC is a registered trade-mark of Interac Inc. BLUETOOTH is a registered trade-mark of Bluetooth SIG, Inc. ™ANDROID and GOOGLE PLAY are trade-marks of Google Inc. All other marks or registered trade-marks are the property of their respective owners.

© 2017 Moneris Solutions Corporation, 3300 Bloor Street West, Toronto, Ontario, M8X 2X2.

All Rights Reserved. This manual shall not wholly or in part, in any form or by any means, electronic, mechanical, including photocopying, be reproduced or transmitted without the authorized consent of Moneris Solutions Corporation ("Moneris"). This guide is for informational purposes only. Neither Moneris nor any of its affiliates shall be liable for any direct, indirect, incidental, consequential or punitive damages arising out of use of any of the information contained in this guide. Neither Moneris or any of its affiliates nor any of our or their respective licensors, licensees, service providers or suppliers warrant or make any representation regarding the use or the results of the use of the information, content and materials contained in this guide in terms of their correctness, accuracy, reliability or otherwise. Your credit and/or debit card processing is governed by the terms and conditions of the Moneris PAYD Merchant Agreement (the "Merchant Agreement") with Moneris. It is the merchant's responsibility to ensure that proper card processing procedures are followed at all times. Please refer to your Merchant manuals and the Terms and Conditions of your Merchant Agreement(s) for details. The *Moneris Merchant Operating Manual* is available at getpayd.com/paydpro/support.